

TECHNICAL DATA BL100
Remote controlled Ethanol Burner (100 cm 39,37 in)
Electronic ignition and security detectors

1. Technical data
2. Dimensions
3. Minimum dimensions of safety
4. Operating Procedure



1



Controls

Remote control, On/off button

Dry contact for home automation applications & remote control via Smartphone or remote commands



Ignition - Power

Automatic and secured ignition through low-voltage electronic induction electrodes
Feed pumps with high-tech membranes

TECHNICAL DATA BL100
Remote controlled Ethanol Burner (100 cm 39,37 in)
Electronic ignition and security detectors



Security

Electronic sensors that automatically halt the unit in case of malfunction
(CO², heat, levels, tank gauge, etc.)



Standards

All AFIRE devices comply with the following safety standards:
CE (Europe), FCC (USA), IC (Canada)



BL100 data



 
Output: 6 200 W (21 000 BTU)
Capacity of the tank: 5 L (1,32 Gal)
Consumption: 1 liter/hour (0,26 Gal/hour)
Weight: 20 kg (44 Lbs.)
Dimensions: 100 / 24 / 12,3 cm (39,37 / 9,45 / 4,84 in)

AFIRE Ltd 2F, 6 London street, Paddington, W21HR LONDON - ENGLAND

AFIRE World Ltd 33, Ashley Road, Tsm Sha Tsui, Kowloon, Hong-Kong

Tel. : + 44 20 3286 7060 E-Mail : contact@a-fire.com Internet : www.a-fireplace.com www.a-fire.com


TECHNICAL DATA BL100 **Remote controlled Ethanol Burner (100 cm 39,37 in)** **Electronic ignition and security detectors**

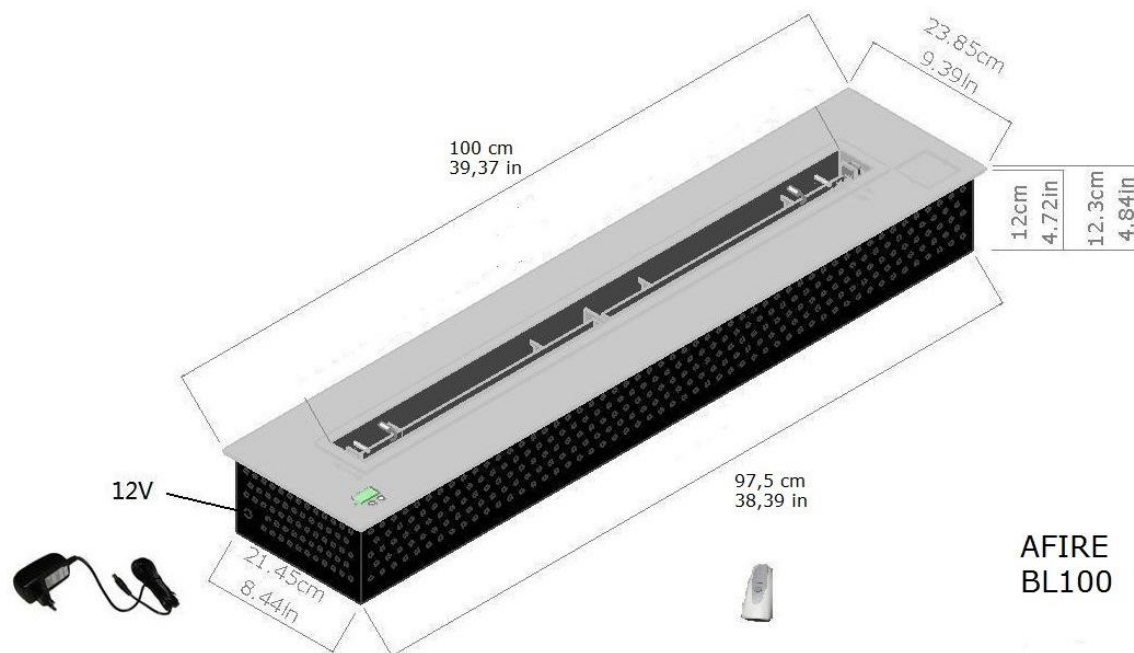

3

Minimum dimensions of safety with non-combustible materials

 Above: 400 mm; 16 inches. Edges: 80 mm; 3,2 inch. Back: 60 mm 2,5 inch.

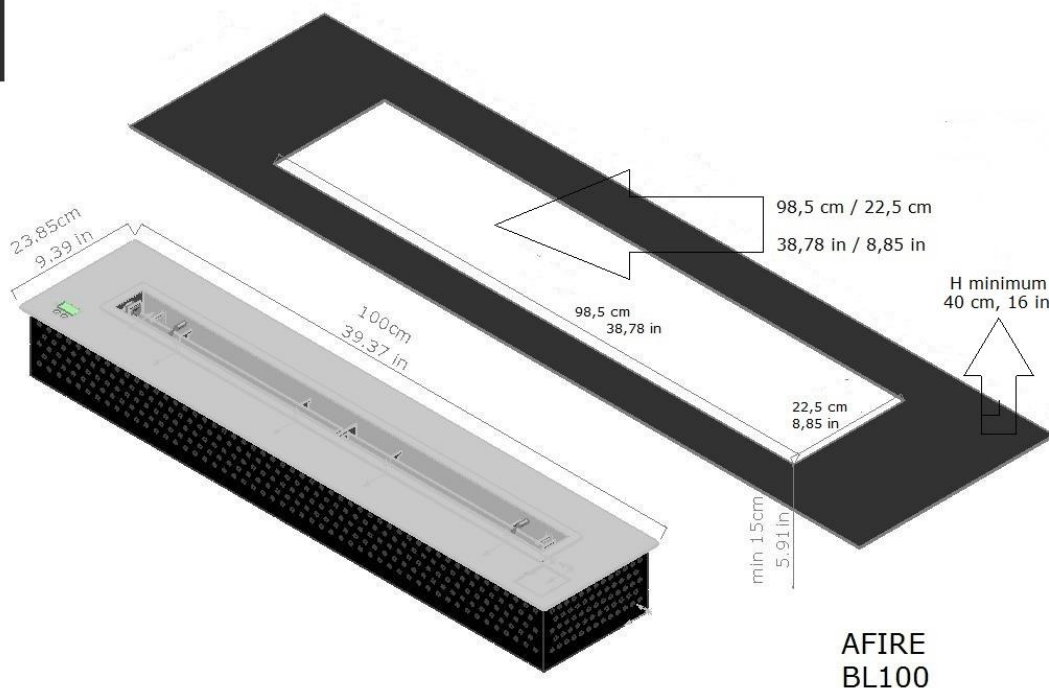

TECHNICAL DATA BL100

Remote controlled Ethanol Burner (100 cm 39,37 in)

Electronic ignition and security detectors

Operating procedure

A. Power supply

Connect the provided 12V adapter



4

B. Tank filling

Only use denatured ethanol 95 – 97%.

Press on the button **2**

The door is unlocked, open the door, remove the cap and fill the tank with a funnel.

When the tank is full, a beep warns you and a message is displayed on the LCD screen.

Put the cap back on and close the door of the tank.

After a few seconds the door will be automatically locked



Never fill the burner directly, fill the ethanol tank

C. Press on the remote control, the on/off switch (**1**) or the remote button to ignite or switch off the burner



on/off switch



tank opening **2** **1** on/off switch



dry contact for home automation